

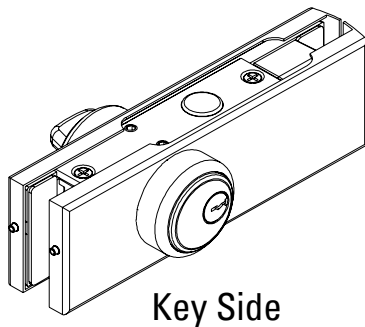
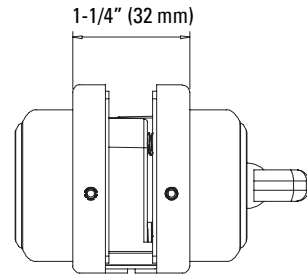


Corner Patch Lock w. 5 Keys and Strike Plate



BA5214600 | Installation Instructions

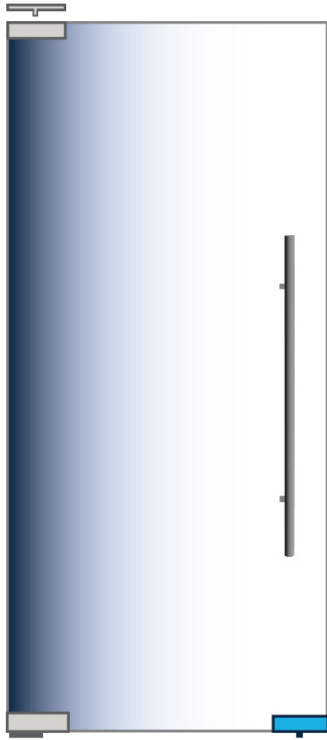


Key Side

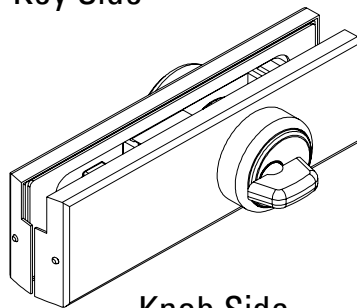


Knob Side

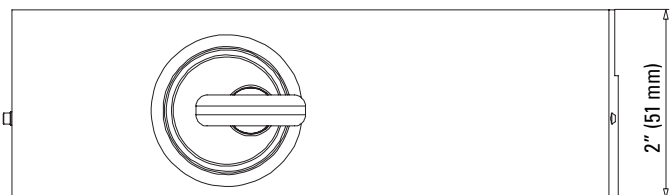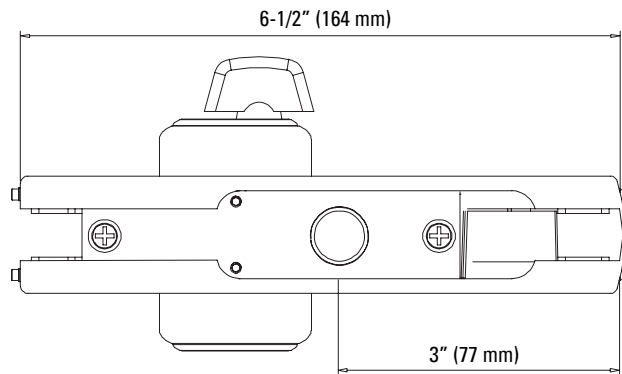

Exploded View

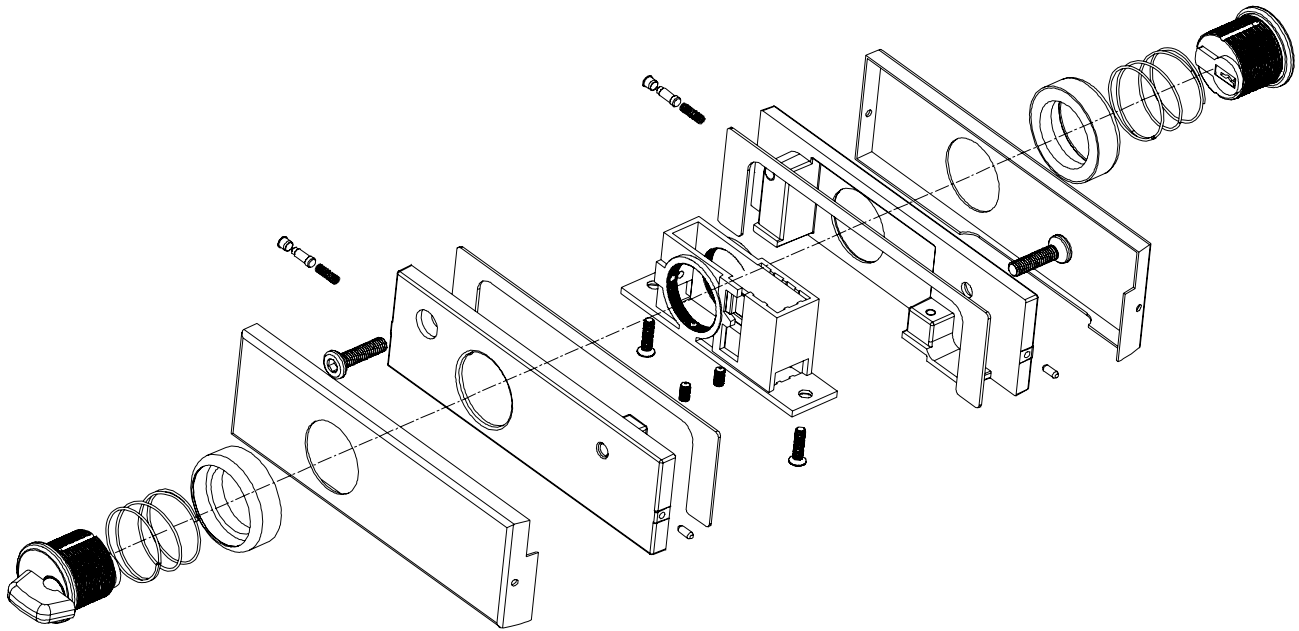


Glass Cutout

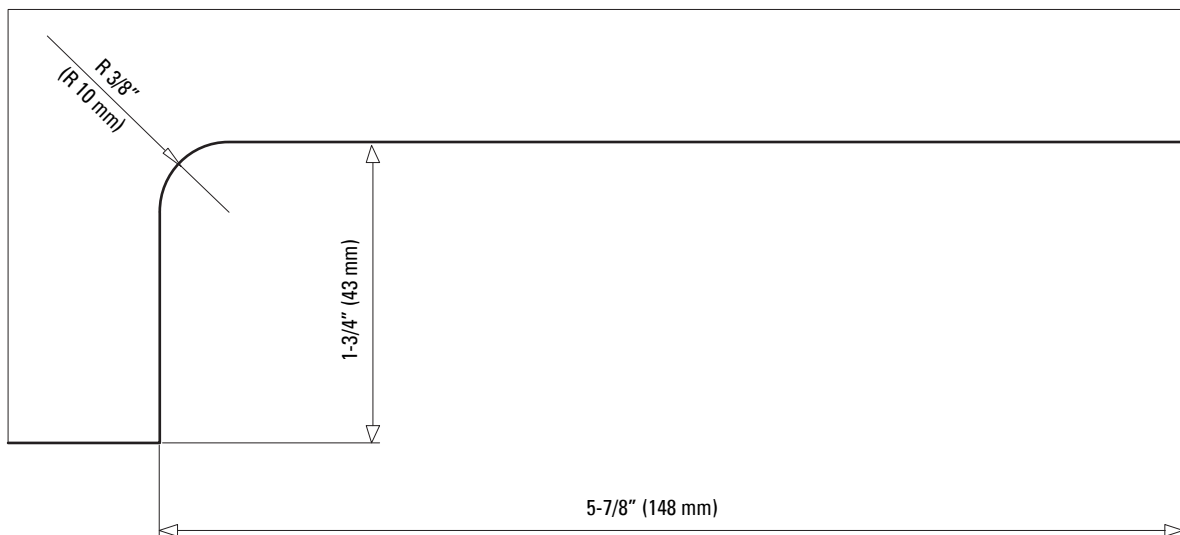

Installation Guide


1. Loosen grab screws

- Turn screws A and B with an Allen key just enough to loosen them so that patch can grab the glass but still move as you adjust

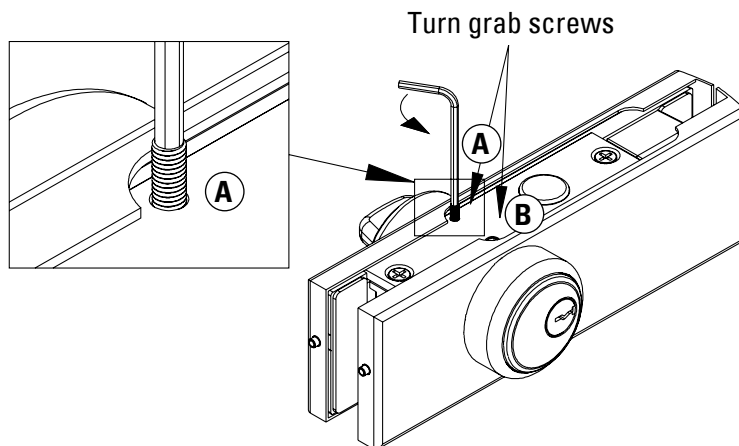


2. Remove lock cylinders

- Insert key into lock cylinder (C)
- Pull outward on outer lock cylinder cover (D) while turning the key counter-clockwise (E)
- This should allow you to remove the lock cylinder from the patch (F) while unscrewing the bolt from the patch (G)

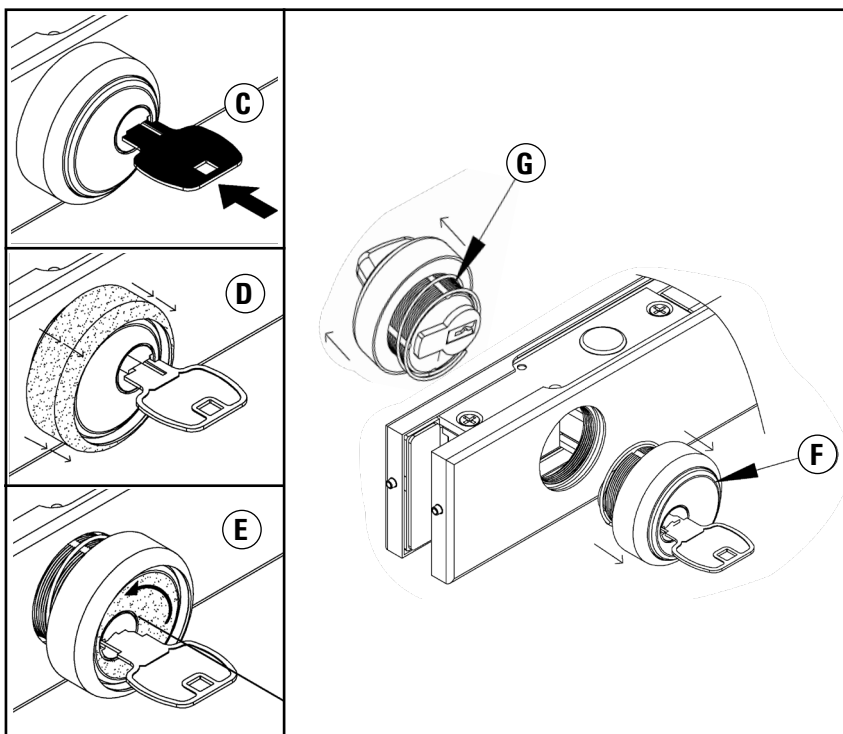


3. Open cover plates via spring pins

- Press spring pins (H and I)
- Open front and back cover by pulling outward (J)
- Set covers aside

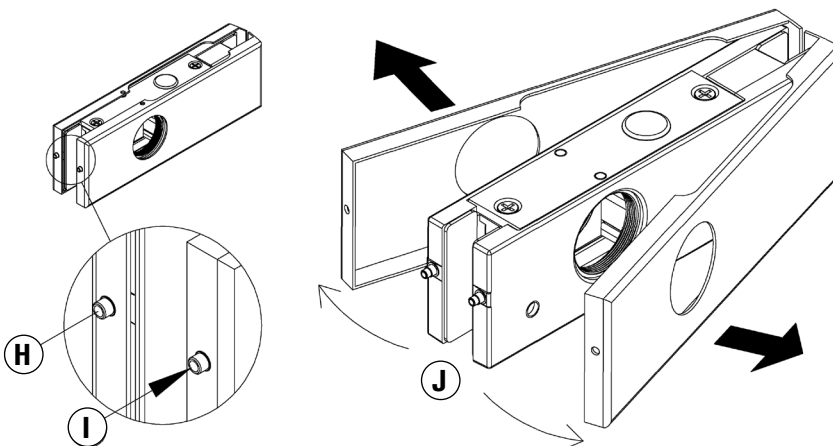


4. Open patch

- Remove screws (K and L) with Allen key and pull apart the two piece of patch

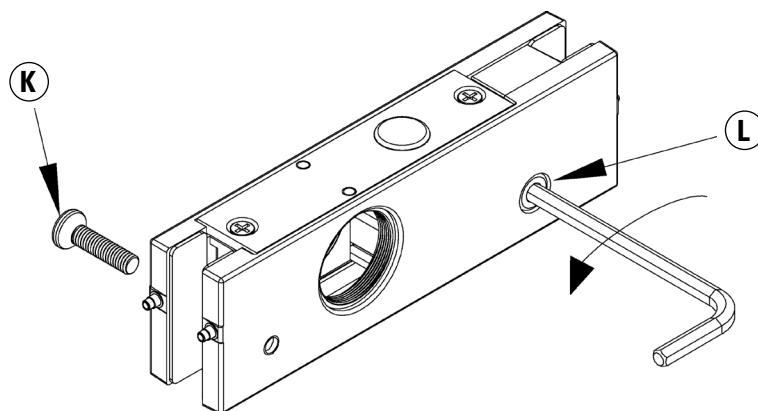


5. Apply patch to glass cutout

- Insert provided gasket between two halves of patch and apply to glass cutout as shown (M)

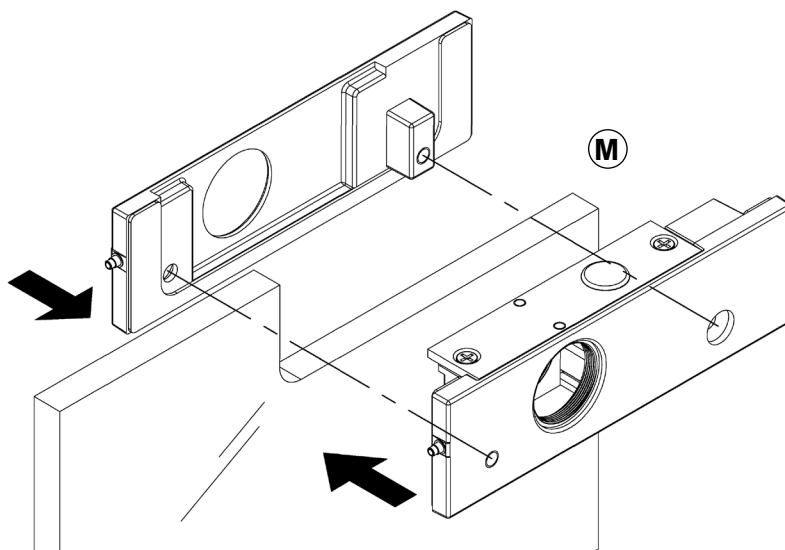


6. Tighten patch onto glass

- Insert and tighten screws (G and H) with Allen key

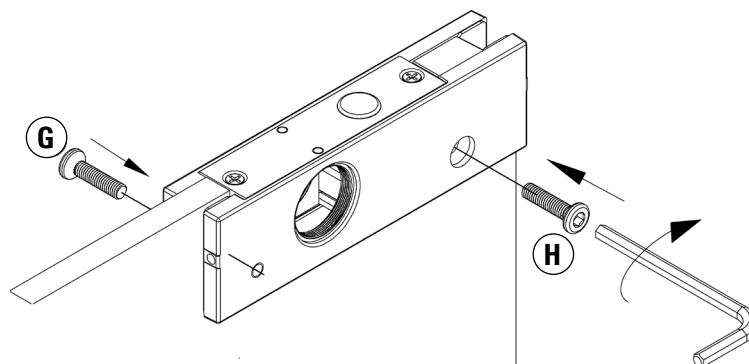


7. Reapply cover plates

- Place cover plates over inner patch, first over fixed pins on the back of the patch and then over the spring pins on the front (H and I)

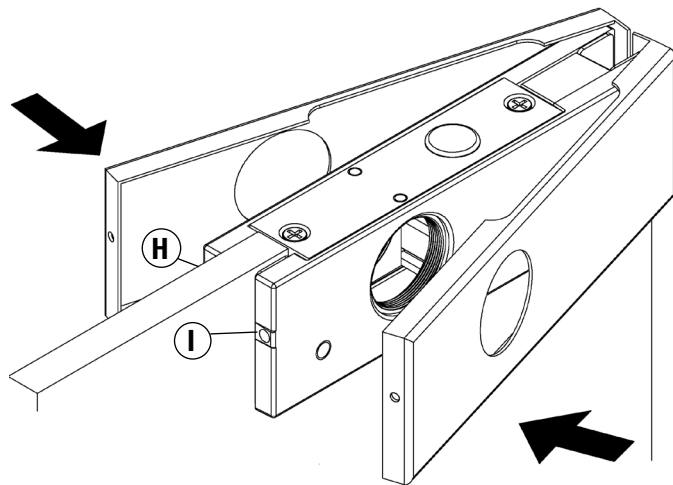

8. Screw in bolt and lock cylinder

- Ensure cover spring is on both the bolt and lock cylinder before inserting them back into the patch (N)
- Insert bolt and lock cylinder at the same time, turning the bolt counter-clockwise
- Ensure the grooves along the cylinder are facing upward toward to ensure the grab screws will screw into them (O)

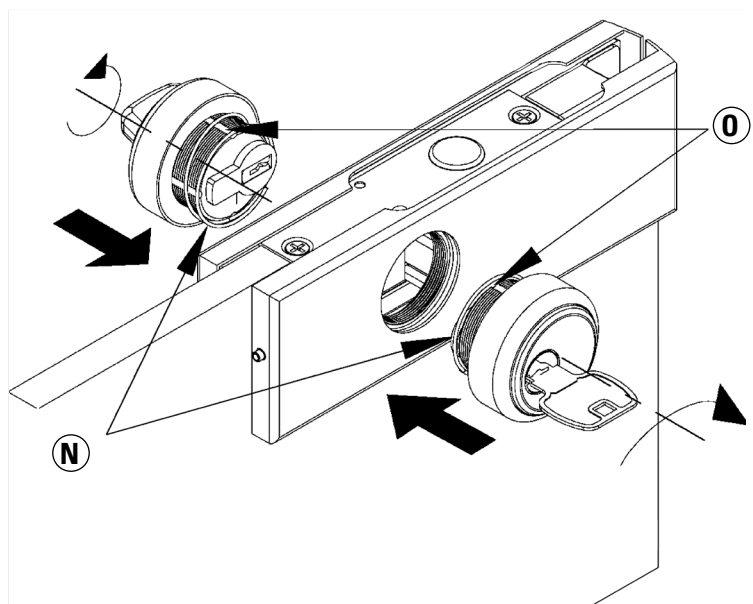

9. Screw in grab screws

- Screw in the grab screws (A and B) with an Allen key

